


MONOPRICE

How To:


Crimp On Cat6 RJ-45 Plugs with Inserts (PID# 1026/1027)




Step 1: Cut your cable and strip about 1" of the outer jacket off the tip.

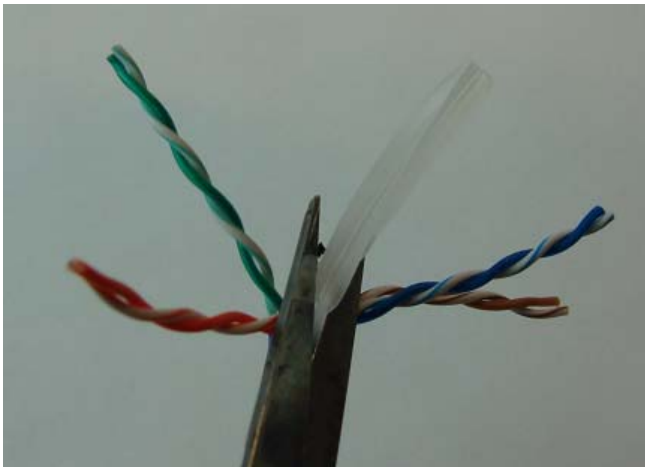

Step 2: Clip away the spleen. Untwist and splay out the wires.

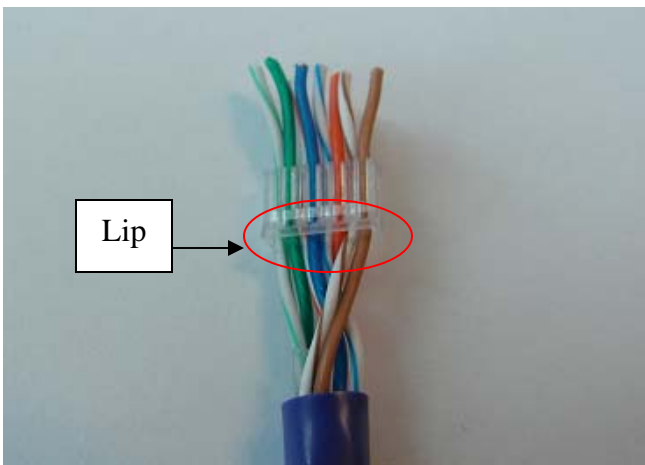


Step 3: Sort your wires in the proper pinout configuration and insert each wire through the insert. Set the insert as far down and as close to the outer jacket as possible.

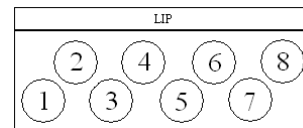





Step 4: Trim away the excess wires from then end.

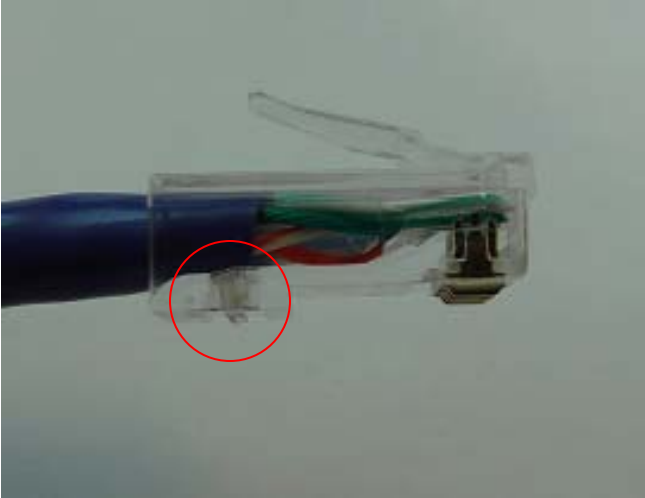


Step 5: Insert the wire tips with the insert as far into the connector as possible. The lip of the insert should be pointed down in the diagram to the left. Squeeze the outer jacket into the connector as well until it reaches the jacket clamp on the connector

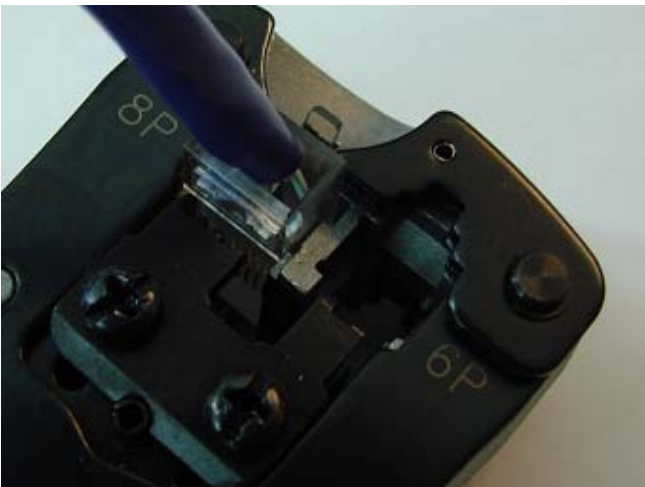


Step 6: Insert the plug into your crimper and crimp down.

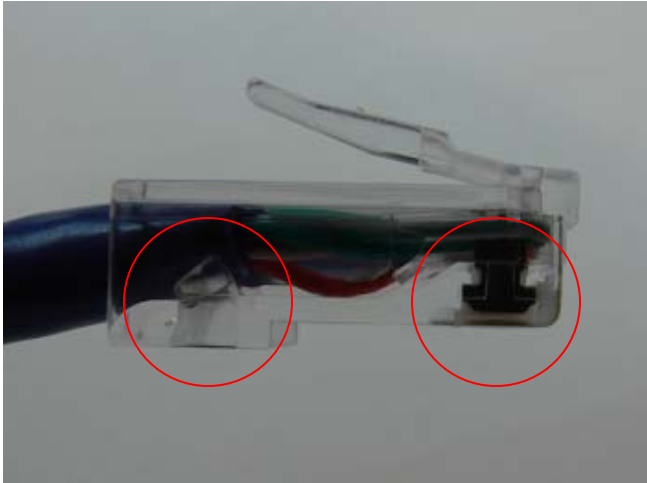

You're Finished! You should end up with a finished connector with the gold contacts pushed in place and the outer jacket of the cable secured to the connector by the jacket clamp.

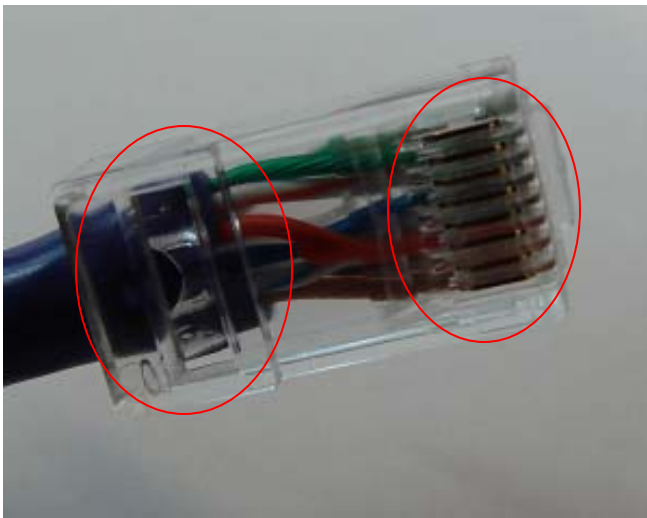

PINOUTS:

Pin	T568A	T568B
1	Green/White 	Orange/White 
2	Green 	Orange 
3	Orange/White 	Green/White 
4	Blue 	Blue 
5	Blue/White 	Blue/White 
6	Orange 	Green 
7	Brown/White 	Brown/White 
8	Brown 	Brown 